

BRAMAH FITTING INSTRUCTIONS

For ROLA CM Metal Casement Window Lock

Tools required

Electric Drill with 4.6mm twist drill
Bradawl
Centre Punch
Junior Hacksaw

1 Fully close the window and position the template provided. Make sure the handle will miss the lock's body then centre punch the fixing hole centres. Drill two 4.6mmØ holes in the frame to a suitable depth.

2 Remove bolt, then secure body to frame with self tapping screws. If required, fit 3mm packing piece, 6mm packing is available (R3/05). Cut off any thread projecting through the frame.

Replace bolt from below, with key operating side facing into room and stepped face first.


3 To operate push the bolt fully to the top, using a standard ROLA key (R 6/01), lock the bolt in position. The bolt is held in the unlocked position by ball catches and can be secured with the ROLA key.

Contact Details

Enquires, catalogues, requests for quotes and all matters historical, not on this CD, can be directed to sales at **Bramah, 31 Oldbury Place, London W1U 5PT** or by the following contact numbers:

Lock Manufacturing - Bramah and Rola Lock sales

Alpha Dial Telephone: +44 (0) 8700 BRAMAH (272624)
Facsimile: 44 (0)20 7935 2779
Email: lock.sales@bramah.co.uk

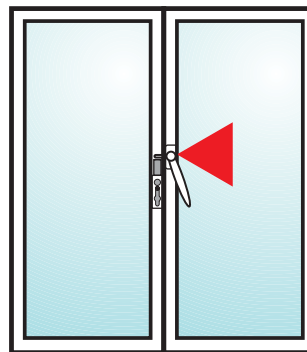

Application

