


## 3000 Series Locks

### FITTING INSTRUCTIONS

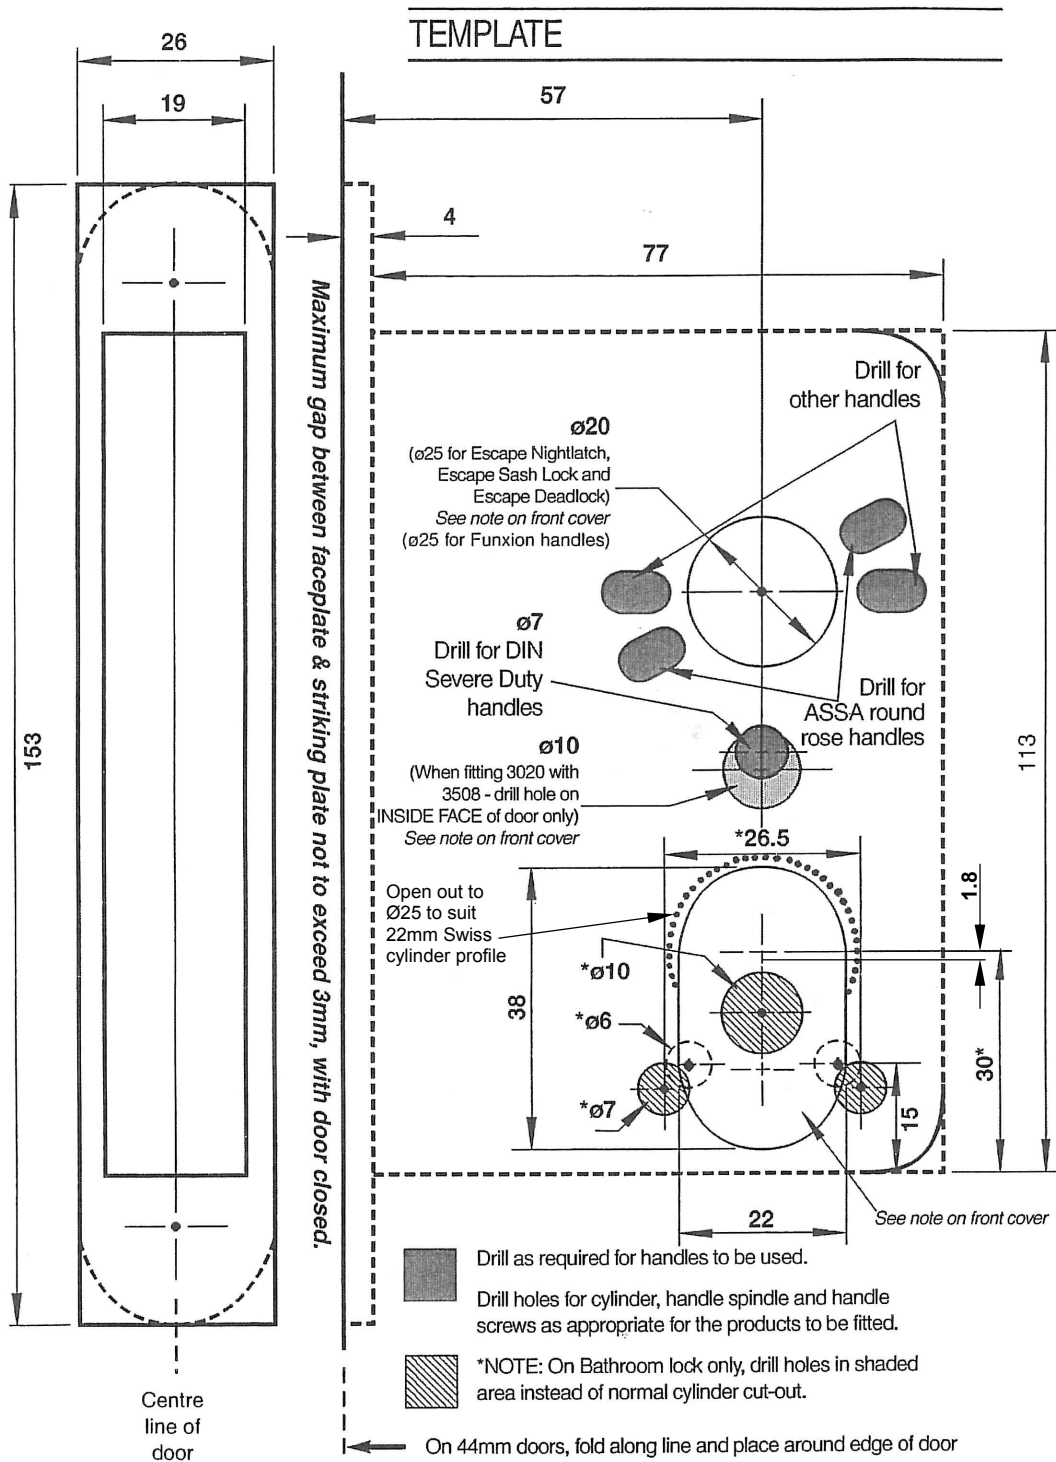

#### LOCKS WITH DIFFERENT INTERNAL AND EXTERNAL FUNCTIONS -

**Single cylinder only (without thumbturn):** Standard specification for 3069B, 3061, 3059 and 3062. On the OUTSIDE face of the door, drill and prepare oval hole for cylinder fitting, ensuring hole does not pass beyond the centreline of the door.

**Half Set of Handles:** Standard specification for 3069, 3069B, 3061, 3059 and 3062. On the INSIDE face of the door, drill a 25mm diameter hole for handle spindle, ensuring hole does not pass beyond the centreline of the door.

**Internal Status Indicator 3508:** Standard specification for 3020. On the INSIDE face of the door, drill a central 10mm diameter hole, ensuring hole does not pass beyond the centreline of the door.

Bramah

31 Oldbury Place, Marylebone, London, W1U 5PT. Tel: 0870 027 2624

PK215 Iss:1

## FITTING CYLINDERS

To fit a Euro Profile cylinder, simply remove the faceplate, place the cylinder in the cylinder hole, and insert the fixing screw through the forend into the cylinder.

When fitting an Oval Profile cylinder, the two plastic inserts in the cylinder hole should first be levered out with a screwdriver or similar tool; then proceed to fit new cylinders as above.

## CHANGING HAND

### SASH LOCK, LATCH

- 1) Remove the faceplate from the lock.
- 2) Rotate the latchbolt to the desired handing.
- 3) Replace the faceplate and test the operation of the lock. Locks with brass finish: remove temporary M4 screw from faceplate and fit brass M4 screw.

### BATHROOM LOCK, ESCAPE SASH LOCK

- 1) Remove the faceplate from the lock with the deadbolt extended.
- 2) Retract the latchbolt by placing a lever handle spindle into the handle follower and turning it.
- 3) With the latchbolt retracted, remove the handing screw (illustrated).
- 4) Turn the handle back until it is possible to reverse the latchbolt (do not completely release the handle).
- 5) Fully retract the handle again and replace the handing screw and faceplate. Release the handle and replace the faceplate.
- 6) Test the operation of the lock.


### NIGHTLATCH

- 1) Remove the faceplate.
- 2) Insert a screwdriver or similar tool into the handing hole in the rear of the case.
- 3) Push the latchbolt clear of the forend and rotate to the correct hand.
- 4) Insert a screwdriver or similar tool into the deadlocking ram handing slot.
- 5) Push the deadlocking ram clear of the forend and rotate to the correct hand.
- 6) Replace the faceplate and test the operation of the lock.

### 3069B EMERGENCY DEADLOCK.

The lock is supplied with two self adhesive labels. Please ensure the appropriate label (depending on the handing of the door) is attached to the inside of the door.

Euro Profile



Oval Profile



22mm Swiss Profile



Latchbolt

Faceplate

Handing Screw

Latchbolt

Handle Follower

Faceplate

Handing Slot


Deadlocking Ram

Latchbolt

Handing Hole

Faceplate

## TEMPLATE

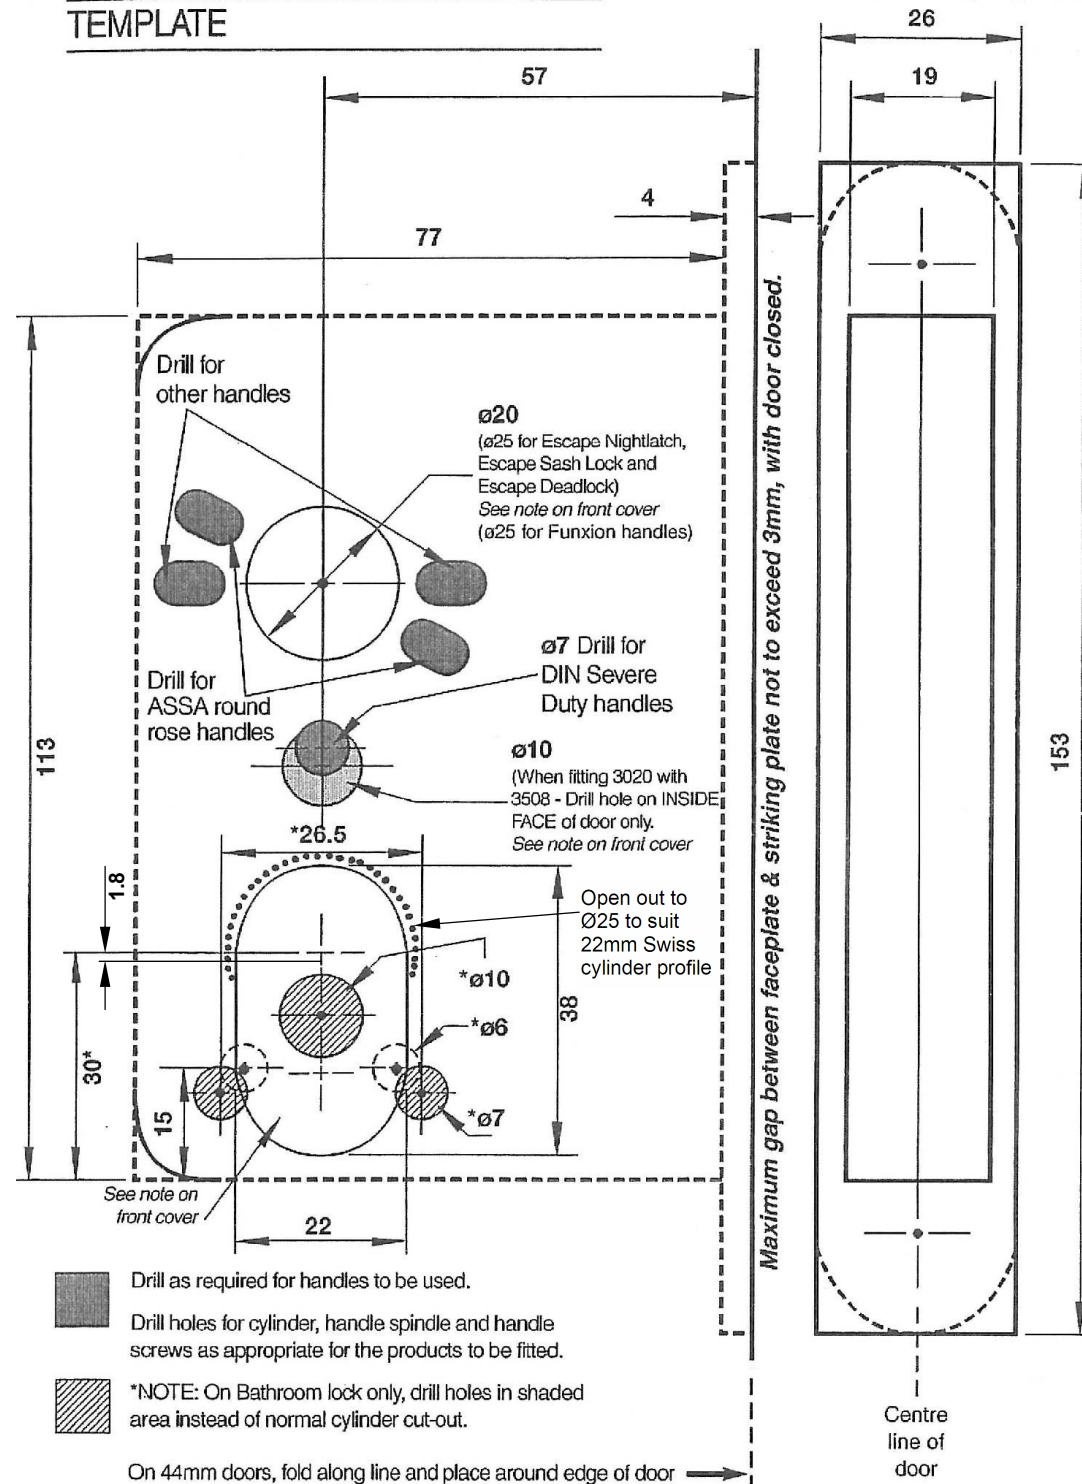

■ Drill as required for handles to be used.

▨ Drill holes for cylinder, handle spindle and handle screws as appropriate for the products to be fitted.

▧ \*NOTE: On Bathroom lock only, drill holes in shaded area instead of normal cylinder cut-out.

On 44mm doors, fold along line and place around edge of door →